



Quick Start Guide

Notice:

All Blodgett Combi units are entitled to a free start-up by a certified technician. It is recommended that a start-up be performed prior to operation to ensure unit has been properly installed and configured after shipment. Neglecting to have a start-up performed may adversely affect performance.

To schedule a start-up visit

<http://www.blodgett.com/where-to-get-service/>

Input your state or province in the drop down menu and select search. Using the provided information, contact one of the service agents listed for your area code to schedule a start-up for your Blodgett Combi unit.


Starting the unit

To turn on your BLCT-6E Select the red and grey power key at the front of the unit.



Picking an Item

The unit will go through a brief start-up sequence and then load to the **Racktimer Menu screen**.

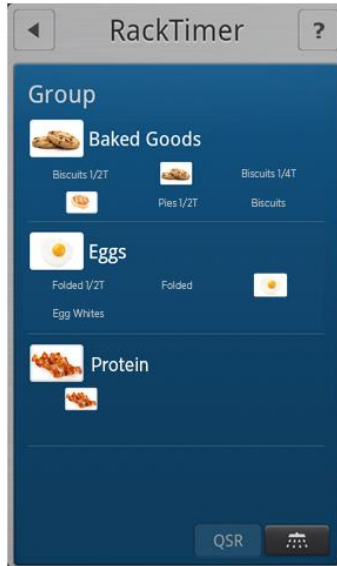

On this screen you will see the preloaded recipes available to cook. To begin cooking select the icon of the item you wish to cook. This will bring you to the **Racktimer Cook screen**.

Upon entering the Racktimer cook screen, the unit will begin heating. If the oven is not at proper baking temperature for the selected item, a **Pre-heat message** will be displayed. This pop-up will clear and an alarm will sound once the oven is ready to bake.




Single Stage Cooking with A.R.T.

When preheat is complete, select the product icon at the top of the screen. The icon will turn gold, indicating it's been selected.



Next select the rack position area to the right of the timers to assign the item to a rack and set the timer.

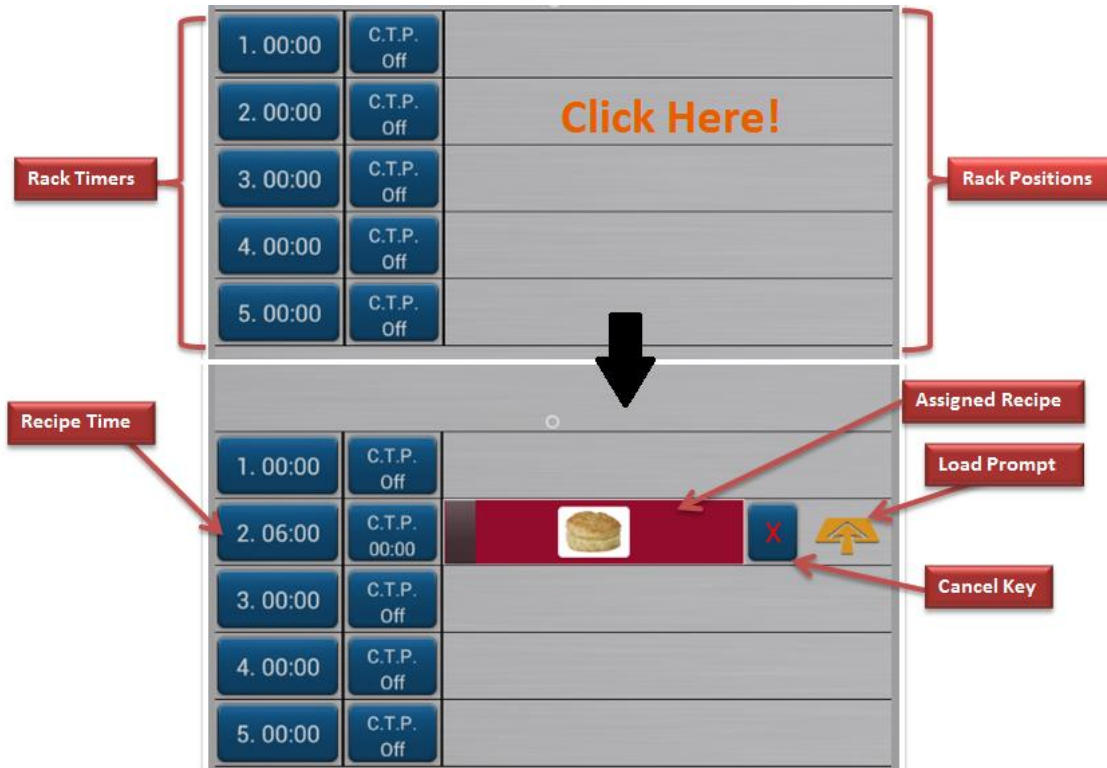


When product has been assigned to all desired tray positions, open the door and load the product.

NOTE: Door opens in two stages, first left, the door opens slightly to allow steam to escape, then right to fully open door. CAUTION: Keep face and hands away from door opening for 10 seconds to prevent steam burns.


When finished loading product, close the door and the timer(s) will automatically start. If the oven temperature drops due to door opening, the C.T.P. timer will start counting up until the oven is back up to temperature. This time will be added to the end of the standard time to compensate. When both timers have counted down an alarm will sound and an unload icon will prompt the user to unload the product.

To switch to a different product, select the back key (highlighted below) in the top left corner of the screen, then select the desired product group. Back arrow only visible if all racks are clear of product.

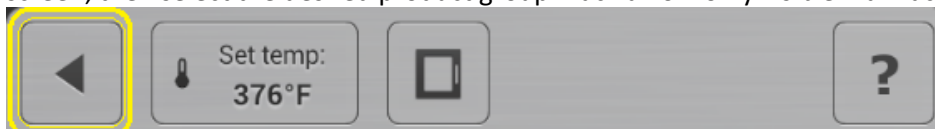


Multi Stage Cooking with QSR


The QSR allows for the cooking product recipes that require more than 1 particular set temperature or cook mode. To enter the QSR select the QSR key at the bottom of the group selection screen.

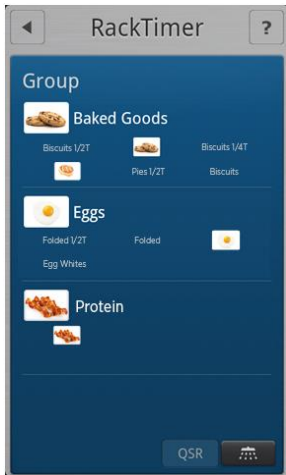


To enter the QSR select the QSR key at the bottom of the group selection screen.

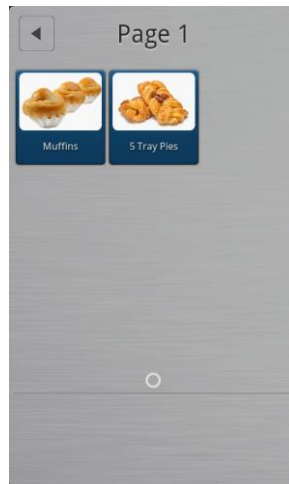


Select the product you wish to cook. **Note:** you can return to the A.R.T. menu by selecting the **back arrow** key in the top left corner.

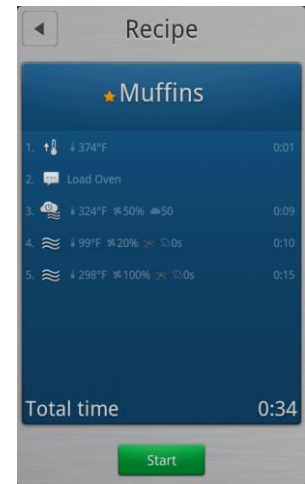


Select the start key to initiate the recipe program. The oven will preheat and then prompt you to load oven.

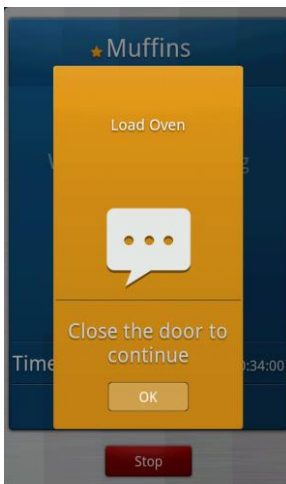

When notified, load product. The program will progress as soon as the door closes.

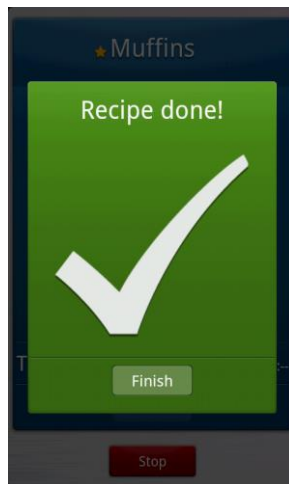


The program will count down to completion. An alarm will sound a done message will be presented. Select **Finish** to clear the message.

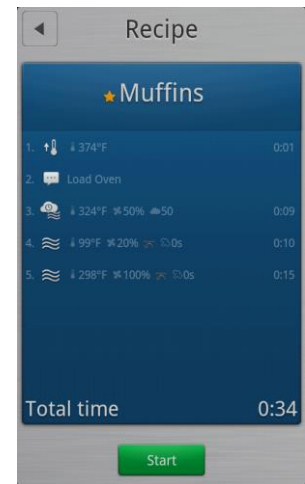

The screen will return recipe program page. Select the back arrow to return to the QSR page, select the back arrow again to go to the A.R.T. group selection screen.


Cleaning

To clean the unit, select the **Cleaning** icon at the bottom of either the Menu or Cook screens.

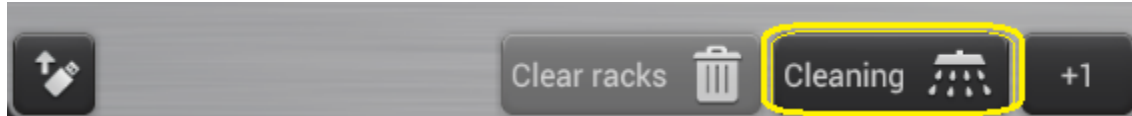

NOTE: Cleaning is only available in the cook screen when no items are on the racks. Complete cook cycles or press Clear Racks to cancel prior to cleaning.

Select the desired clean intensity from the pop-up menu and follow the on screen instructions to initiate cleaning.

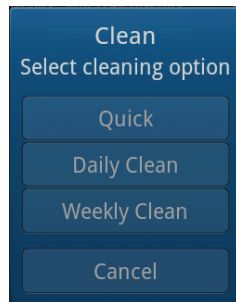

The unit will automatically shut down once the cycle is complete, unless shut down is canceled.

Energy Saver Mode (Optionally Activated)

If the setting is active, the unit automatically goes into energy savings mode if left idle in the cook screen for 30 minutes. This reduces set temperature and displays the image below. To wake the unit up, simply touch the screen and the unit will heat up to the temperature required for the currently selected product.




Software Revision

The currently applied menus and software revision can be determined quickly by viewing the information on the **XRev** group at the bottom of the **A.R.T. group selection screen**

The **XRev** shows the following information.

- 5 digit Blodgett part number
- Alpha character for the revision level of the settings/software
- The date generated

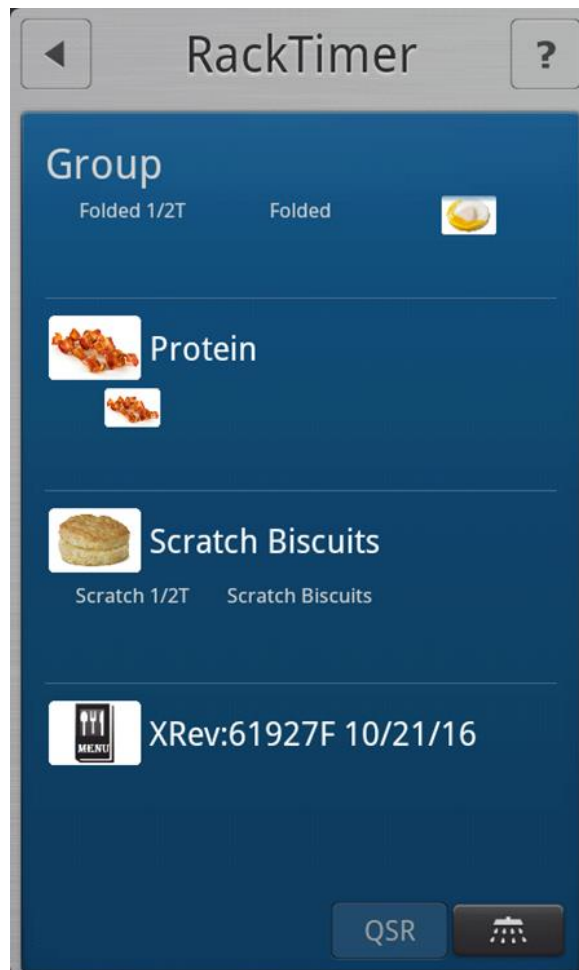

This information will assist when determining if future updates need be applied, or in event the control requires servicing.

Quick Key Reference

