

Control Counters and Error Logs:

Every time the Control instructs the Relay Board to activate a component a record of that “call” is stored in the control. Also every time an error occurs, a count is stored in the control.

To Access the Counter Logs:

Press “Maint” then scroll to Service (#4) and enter the code 7378 if required. Then press in on the knob to enter. Scroll to Counters (#1) and press in on the knob to select. Scroll through each item from Heat to RCP to USB and when on an item, to view the count press the knob, and to exit the count, press the knob.

To Access USB Functions, Turn the Control Off to Begin.

To Download Recipe Programming from and to USB:

To pull recipes from one control for installation on another:
Press “Maint” then scroll to Manager Programming (#2) and enter code 6647, if necessary. Then press in on the knob to enter. Scroll to Copy RCP to USB, then Insert USB key and push in the knob to select.

To Download Factory Programming from and to USB:

Press “Maint” then scroll to Factory Program (#3) and enter code 3228. Then press in on the knob to enter. Scroll to Copy FCT to USB (to copy Factory Programming) or to Copy FCT from USB. Then Insert USB key and push in the knob to select.