

BLODGETT HV-100EM - Motor Drive Parameters

PRESS	DISPLAY	PRESS	DISPLAY
▲	Keep Pushing Until		(Continued)
Enter	Once	▲	Once
Enter	Once	Enter	Once
	Set to factory setting @ B1-01		Set to factory setting @ D1-03
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.		If incorrect, follow the next three steps; if correct, skip the next 2 steps.
▶	until the incorrect number flashes	▶	until the incorrect number flashes
▲or▼	to set to factory setting	▲or▼	to set to factory setting
Enter	the drive will confirm the change	Enter	the drive will confirm the change
	the contol will return to B1-01		the contol will return to B1-01
▲	Keep Pushing Until	▲	Once
Enter	Once	Enter	Once
	Set to factory setting @ C1-01		Set to factory setting @ D1-04
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.		If incorrect, follow the next three steps; if correct, skip the next 2 steps.
▶	until the incorrect number flashes	▶	until the incorrect number flashes
▲or▼	to set to factory setting	▲or▼	to set to factory setting
Enter	the drive will confirm the change	Enter	the drive will confirm the change
▲	Once	ESC	To Exit Set Up
Enter	Once	▲	Once
	Set to factory setting @ C1-02	Enter	Once
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.		
▶	until the incorrect number flashes	▲	Keep Pushing Until
▲or▼	to set to factory setting		(In Par, navigation is modified)
Enter	the drive will confirm the change	▶	until the incorrect number flashes
▲	Once	▲	to set to
Enter	Once	Enter	Once to view settings
	Set to factory setting @ C6-02	Enter	Once
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.		Set to factory setting @ H1-03
▶	until the incorrect number flashes		If incorrect, follow the next three steps; if correct, skip the next 2 steps.
▲or▼	to set to factory setting	▶	until the incorrect number flashes
Enter	the drive will confirm the change	▲or▼	to set to factory setting
▲	Keep Pushing Until	Enter	the drive will confirm the change
Enter	Once	▲	Once
	Set to factory setting @ D1-01	Enter	Once
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.		Set to factory setting @ H1-04
▶	until the incorrect number flashes		If incorrect, follow the next three steps; if correct, skip the next 2 steps.
▲or▼	to set to factory setting	▶	until the incorrect number flashes
Enter	the drive will confirm the change	▲or▼	to set to factory setting
▲	Once	Enter	the drive will confirm the change
Enter	Once	▲	Once
	Set to factory setting @ D1-02	Enter	Once
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.		Set to factory setting @ H1-05
▶	until the incorrect number flashes		If incorrect, follow the next three steps; if correct, skip the next 2 steps.
▲or▼	to set to factory setting	▶	until the incorrect number flashes
Enter	the drive will confirm the change	▲or▼	to set to factory setting
▲	Once	Enter	the drive will confirm the change
Enter	Once	▲	Once
	Set to factory setting @ H2-01	Enter	Once
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.		
▶	until the incorrect number flashes	▶	until the incorrect number flashes
▲or▼	to set to factory setting	▲or▼	to set to factory setting
Enter	the drive will confirm the change	Enter	the drive will confirm the change
▲	Once	▶	Once
Enter	Once	▲	Once
	Set to factory setting @ H2-01	▶	Once
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.		
▶	until the incorrect number flashes	▲	Once
▲or▼	to set to factory setting	Enter	Twice
Enter	the drive will confirm the change		Set to factory setting @ L2-01

BLODGETT HV-100EM - Motor Drive Parameters

PRESS		DISPLAY			
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.				
▶	until the incorrect number flashes				0
▲ or ▼	to set to factory setting				2
Enter	the drive will confirm the change			E n d	
▶	Twice	L	2	- 0 1	
▲	Once	L	3	- 0 1	
▶	Once	L	3	- 0 1	
▲	Twice	L	3	- 0 4	
Enter	Once				4
	Set to factory setting @ L3-04				4
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.				
▶	until the incorrect number flashes				1
▲ or ▼	to set to factory setting				4
Enter	the drive will confirm the change			E n d	
▶	Twice	L	3	- 0 4	
▲	Twice	L	5	- 0 1	
Enter	Twice				1 0
	Set to factory setting @ L5-01				1 0
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.				
▶	until the incorrect number flashes				0
▲ or ▼	to set to factory setting				1 0
Enter	the drive will confirm the change			E n d	
▶	Once	L	5	- 0 1	
▲	Once	N	1	- 0 2	

PRESS		DISPLAY			
▶	Once	N	1	- 0 2	
▲	Once	N	3	- 1 3	
Enter	Twice			1 .2 5	
	Set to factory setting @ N3-13			1 .2 5	
	correct, skip the next 2 steps.				
▶	until the incorrect number flashes			1 .1 0	
▲ or ▼	to set to factory setting			1 .2 5	
Enter	the drive will confirm the change			E n d	
▶	Once	N	3	- 1 3	
▲	Once	o	1	- 0 2	
Enter	Three times				3
	Set to factory setting @ O1-02				3
	If incorrect, follow the next three steps; if correct, skip the next 2 steps.				
▶	until the incorrect number flashes				1
▲ or ▼	to set to factory setting				3
Enter	the drive will confirm the change			E n d	
ESC	Three times To Exit Par			P A r	
▲	Keep Pushing Until	F	2	0 .0 0	