



PROGRAM USB FOR VCUX PLATFORM UPDATE

Setting up USB:


1. Insert USB drive into a computer.
2. Delete all existing files on the USB drive.
3. Copy the following link to the Blodgett website.
<https://www.blodgett.com/combi-software-update/>
4. At the bottom of the page under **VCUX HL_0.0.12 Update**, select **Software Update** to begin downloading the update file.

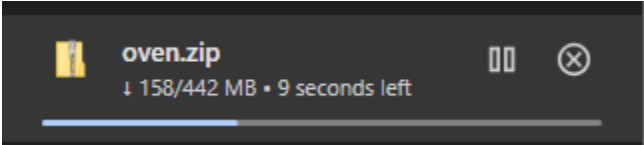


5. When the download is complete open **File Explorer** from the desktop.

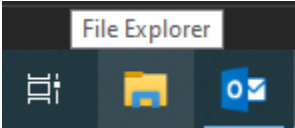

6. In the drive directory select the **Downloads** directory.

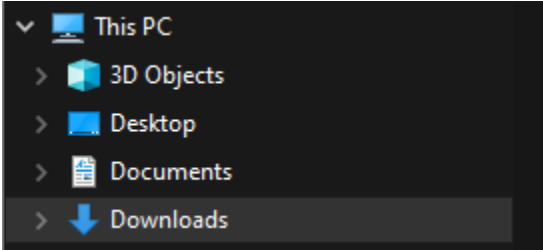


7. Locate the newly downloaded .zip file named **oven**.
8. **Right click** on the file. Select **Extract All**.

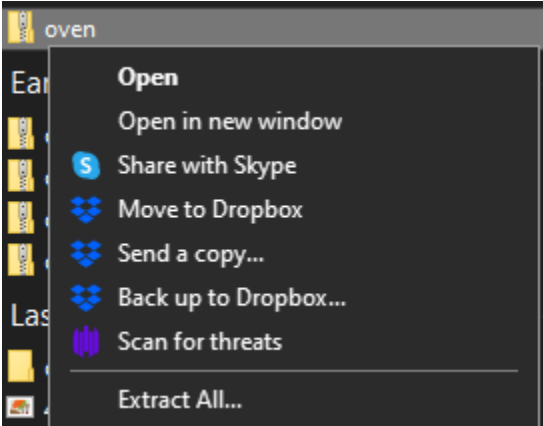




9. An extraction window will be presented. Select **Browse**.

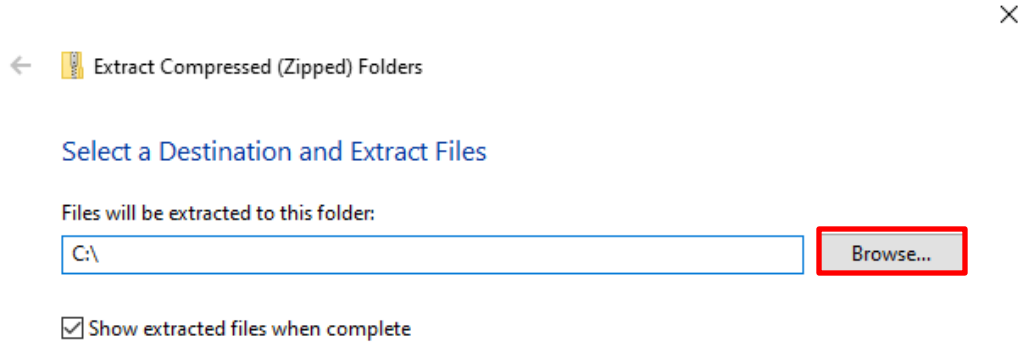


10. In the resulting window find the USB drive and select it. Select **Select Folder**.

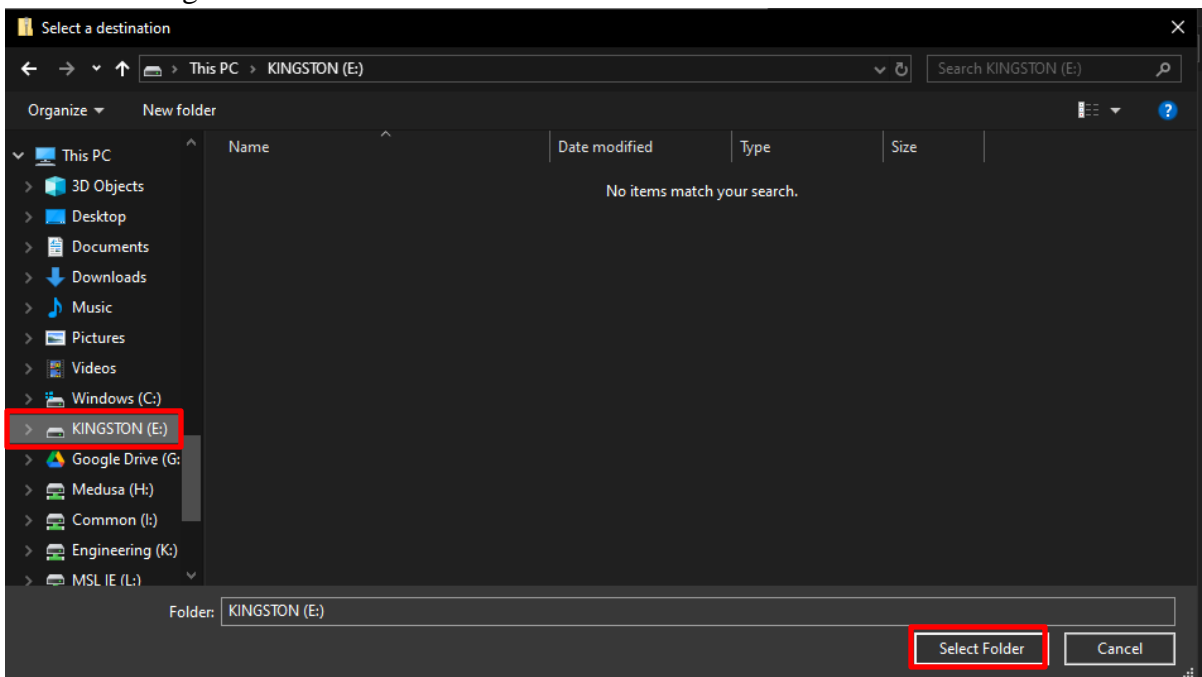

The selected drive address will be pasted in the extraction window from step 9.

11. In the extraction window select **Extract**. The update file folder will be extracted from the .zip file onto the USB drive.

12. Navigate to the USB drive. The oven folder should be the only file on the USB.

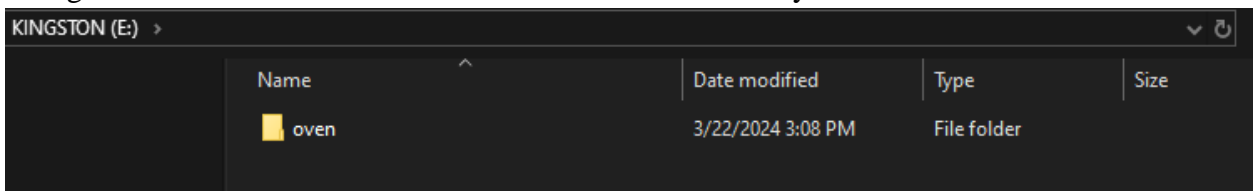

13. The update file is now installed onto the USB drive and is ready for upload to the oven.

*NOTE: The downloaded oven folder must be **extracted** to the USB. If the oven folder is zipped, the software update file will not be recognized.*